




Swiss Time 86 Exchange Street Portland, Maine 04101 (207) 773-0997 www.myswisstime.com info@myswisstime.com

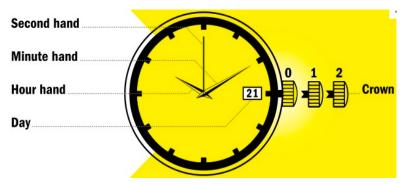

**Normal Crowns:** To set the time, pull the crown out fully to position 2 as shown above. Turn crown clockwise or counterclockwise to adjust the minute and hour hands. Be sure to watch if the calendar jumps; when the calendar jumps it means it is midnight. If it is in the AM when you are setting the watch now go to the correct time, if it is during the PM you must advance the hands past 12:00 again, which will represent Noon. Push crown in 1 click and turn crown until the correct date is shown. If there is a day, turn the crown in the opposite direction. After completing this process, please be sure to push the crown in snug against the case.

**Screw Down Crowns:** Setting the time and date with a screw down crown is the same as above. However, to pull out the crown you must first "unscrew" the crown by turning it in a counter-clockwise direction until the crown releases from the treaded tube. After adjusting the time and/or date, push the crown in and screw down in a clockwise direction until the crown is snug against the case of the watch. This is important; if your crown is unscrewed the level of water resistance for your watch will be compromised.